## 9LD01A AND 9LD02A

## EXPLANATION OF OPERATION

THIS LOAMR WAS WRITTEN TO USE AS LITTLE OF THE CIRCUITRY AS POSSIBLE AND STILL COMPARE THE CHECK SUMS.

THE CONTROL WORD FOR THE LOADER USES ONLY S TRIGGER, AS DOES THE LOAD CARD BUTTON, THEREFORE. IF THE BUTTON IS OPERATING CORRECTLY THE PROGRAM SHOULD LOAD.

NO INDEXING IS USED THROUGHOUT THE LOADER. THE MAIN FRAME INSTRUCTIONS USED ARE LISTED BELOW.

CLA	STA	SLW
TZE	CAL	SUB
ST0	ACL	TMI

THESE INSTRUCTIONS MAY BE ELIMINATED BY IGNORING A CHECK SUM COMPARISON, AND TRANSFERRING MANUALLY, THE LOADER WILL THEN EXECUTE ONLY THREE INSTRUCTIONS, RCDA, RCHA AND TCOA. TO DO THIS PLACE A TRA TO 0001 AT LOCATION 0004, FOR 9LD01 OR TRA TO 77751 AT LOCATION 71754 FOR 9LD02. IF A MANUAL TRANSFER IS UNDESIRABLE PLACE A TRA TO 1 AT LOCATION 0006, FOR 9LD01 OR TRA TO 77751 AT LOCATION 77756, FOR 9LD02

THE CONSTANT AT LOCATION 0023 OR 77773, WHEN SUBTRACTED FROM THE 9L WORD-LOCATION 0026 OR 77776-WILL DECREASE THE DECREMENT-WORD COUNT-BY 1 AND INCREASE THE ADDRESS-INITIAL ADDRESS-BY 1. AFTER THE WORD COUNT IN THE DECREMENT OF 9L HAS BEEN REDUCED TO 0, ALL WORDS WILL HAVE BEEN READ INTO THE CORRECT LOCATIONS, AND THE NEXT SUBTRACTION WILL CHANGE THE ACCUMULATOR TO MINUS. THE CHECK SUMS WILL THEN BE COMPARED AT LOCATIONS 0017 - 0021 OR 77767 - 77771.

LOCATIONS 0006 - 0016 OR 77756 - 77766 CONSTRUCT THE CHECK SUM,

LOCATIONS 0026 - 0027 OR 77776 - 77777 HOLD THE 9L AND 9R WORDS OF EACH CARD. 9L DECREMENT CONTAINING THE NUMBER OF WORDS ON THE CARD AND 9L AODRESS CONTAINING THE INITIAL ADDRESS. 9R CONTAINS THE CHECK SUM OF THE CARD BEING READ.

THIS LOADER USES A SPECIAL TRA CARD WHICH MAY NOT BE USED FOR ANY OTHER LOADER, NOR WILL THE LOADER READ ANY OTHER TRA CARD.

9L OF THE TRA CARD IS BLANK, AND 9R CONTAINS A PLUS TRA TO THE STARTING ADDRESS OF THE PROGRAM BEING LOADED.

*		9LD01A	
00000 0000	25 0 00003 TEMP	IOCD 3,0,21	THIS LOCATION IS USED FOR CONTROL TO READ THE REMAINDER OF THE LOADER, AND ALSO AS STORAGE FRO THE INCOMPLETE CHECK SUM
00001 0762	00 0 01321	RCDA	incom Edil Ciner Bon
	00 0 00025	RCHA B	CONTROL HAS S TGR ON AND WILL READ 9L AND 9R WORDS INTO B+1 AND B+2.
	00 0 00003 00 0 00026	TCOA * CLA B+1	9L WORD-WORD COUNT ON CARD AND INITIAL ADDRESS, ALSO USED AS CONTROL WORD TO READ REMAINDER OF CARD AFTER CONTROL AT B HAS BEEN EXECUTED.
00005 0100	00 0 00027	TZE B+2	IF ZERO-EITHER TRA CARD OR BLANK CARD.
00006 0601	00 0 00000	STO TEMP	IF NOT ZERO-SAVE. 9L TO BE ADDED INTO CHECK SUM.
00007 0621	00 0 00014	STA *+5	ADDRESS OF 8L WORD IN STORAGE
00010 0402	00 0 00024	SUB CONST	L 777777. SUBTRACTING THIS CONSTANT WILL INCREASE THE ADDRESS AND DECREASE THE WORD NO.
00011 -0120	00 0 00020	TMI CONST-4	WHEN ACC BECOMES MINUS THE LAST WORD HAS BEEN ADDED INTO CHECK SUM.
00012 0601	00 0 00026	STO B+1	IF NOT MINUS-SAVE.
	00 0 00020	CAL TEMP	INCOMPLETE CHECK SUM.
	00 0 00000	ACL	8L ADDRESS-INITIALLY.
	00 0 00000	SLW TEMP	SAVE INCOMPLETE SUM.
00016 0500	00 0 00026	CLA B+1	
00017 0020	00 0 00007	TRA *-8	RETURN TO STORE ADDRESS.
	00 0 00000 00 0 00027	CLA TEMP SUB B+2	COMPLETE CHECK SUM.  B+2 WILL HOLD CORRECT CHECK SUM FROM CARD, UNLESS A TRA CARD. IF A TRA CARD  B+2 WILL HOLD THE TRANSFER.
00022 0100	00 0 00001	TZE 1	IF ZERO BACK TO RCDA
	00 0 00001	HTR 1	IF NOT ZERO-HALT
00024 +0000	00777777 CONST	OCT 777777	
00025 -0000	02 0 00026 B	IOCP B+1,0,2	CONTROL TO READ 9L AND 9R OF EACH CARD INTO B+1 AND B+2 RESPECTIVELY

9LD01A 7-01-58 PAGE 2

00026 +000000000000 OCT 0

LOCATION FOR 9L OF EACH CARD WHICH WILL BE USED AS A CONTROL WORD AFTER EXECUTION OF WORD AT B, ALSO AS TEMPORARY STORAGE FOR CONSECUTIVE ADDRESSES AND WORD COUNT AFTER SUBTRACTING COSNT.

00027 +000000000000

OCT 0

9R WORD OF EACH CARD WILL READ INTO THIS LOCATION, AND WILL CONTAIN THE CHECK SUM FROM EACH CARD, UNLESS A TRA CARD. IN THIS CASE 9R WILL CONTAIN A STRAIGHT TRANSFER TO THE START

OF THE PROGRAM.

00000 END

*					9LD02A	
			77745		ORG 32741	
77745	0000 25		_	A		CONTROL TO READ REMAINDER OF LOADER
77746	0060 00	0 0	00001		TCOA 1	DELAY TILL COMPLETE LOADER IS IN
77747	0020 00	0 0	77750		TRA A+3	TRA TO UPPER SECTION OF LOADER
77750	0762 00	0 0	01321		RCDA	
77751	0540 00	0 0	77774		RCHA B	CONTROL HAS S TGR ON AND WILL READ 9L AND 9R OF EACH CARD INTO B+1 AND B+2 RESPECTIVELY.
_	0060 00 0500 00		_		TCOA * CLA B+1	WAIT FOR COMPLETE CARD 9L WORD WHICH WILL CONTAIN THE INITIAL ADDRESS OF THE CARD AND THE NUMBER OF WORDS ON THE CARD
77754	0100 00	0 0	77776		TZE B+2	IF ZERO-EITHER TRA CARD OR BLANK CARD.
77755	0601 00	0 0	77777		STO TEMP	IF NOT ZERO-SAVE. 9L TO BE ADDED INTO CHECK SUM.
77756	0621 00	0 0	77763		STA *+5	ADDRESS OF 8L WORD IN STORAGE
77757	0402 00	0 0	77773		SUB CONST	L 777777. SUBTRACTING THIS CONSTANT WILL INCREASE THE ADDRESS AND DECREASE THE WORD NO.
77760	-0120 00	0 0	77767		TMI CONST-4	WHEN ACC BECOMES MINUS THE LAST WORD HAS BEEN ADDED INTO CHECK SUM.
77761	0601 00	0 0	77775		STO B+1	IF NOT MINUS-SAVE.
	-0500 00					INCOMPLETE CHECK SUM.
77763	0361 00	0 0	00000		ACL	8L ADDRESS-INITIALLY.
77764	0602 00	0 0	77777		SLW TEMP	SAVE INCOMPLETE SUM.
77765	0500 00	0 0	77775		CLA B+1	
77766	0020 00	0 0	77756		TRA *-8	RETURN TO STORE ADDRESS.
	0500 00				CLA TEMP	COMPLETE CHECK SUM.
77770	0402 00	0 0	77776		SUB B+2	B+2 WILL HOLD CORRECT CHECK SUM FROM CARD, UNLESS A TRA CARD. IF A TRA CARD B+2 WILL HOLD THE TRANSFER.
77771	0100 00	0 0	77750		TZE A+3	IF ZERO BACK TO RCDA
77772	0000 00	0 0	77750		HTR A+3	IF NOT ZERO-HALT
					OCT 777777	
77774	-0000 02	2 0	77775	В	IOCP B+1,0,2	CONTROL TO READ 9L AND 9R OF EACH CARD INTO B+1 AND B+2 RESPECTIVELY

9LD02A 7-01-58 PAGE 2

77775 +000000000000		OCT	0	LOCATION FOR 9L OF EACH CARD WHICH WILL BE USED AS A CONTROL WORD AFTER EXECUTION OF WORD AT B, ALSO AS TEMPORARY STORAGE FOR CONSECUTIVE ADDRESSES AND WORD COUNT AFTER SUBTRACTING COSNT.
77776 +0000000000000		OCT	0	9R WORD OF EACH CARD WILL READ INTO THIS LOCATION, AND WILL CONTAIN THE CHECK SUM FROM EACH CARD, UNLESS A TRA CARD. IN THIS CASE 9R WILL CONTAIN A STRAIGHT TRANSFER TO THE START OF THE PROGRAM.
77777 +0000000000000	TEMP	OCT	0	TEMPORARY STORAGE FOR IN COMPLETE CHECK SUM.
00000		END		